



# Bird Brush | Installation Guide


## INSTALLATION REQUIREMENTS

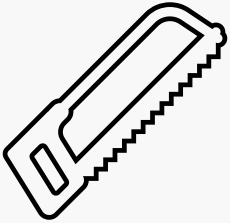


Hack Saw

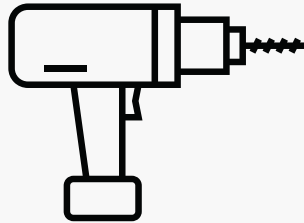


Drill

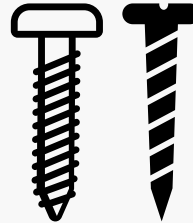


Screws

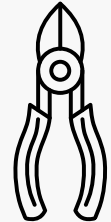

Cutter

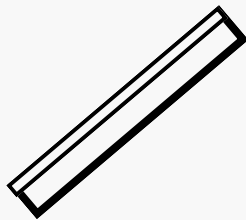

Bracket

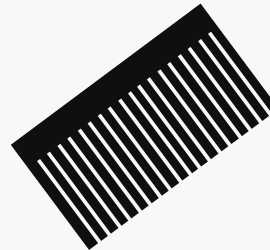

Bird Brush

## MEASURING

Step 1: Measure the area that you will be installing the bird brush to.

Step 1.2: If you are installing onto a roller door, measure the gap between the frame and the roller door so that you have the correct length of brush before installing.

Step 2: Cut the bird brush with a cutter to your desired measurement. Do the same with the aluminium bracket by using a hack saw or powered saw if you have access to one.

## PRE-INSTALL

Step 1: Identify what type of surface you will be installing the bird brush bracket on to e.g. wood, concrete or metal.

Step 2: Use drill to make a pilot hole on the aluminium bracket (as shown in the photo below). The pilot hole should be the same diameter as the screw you will be using.



Step 3: Slide the plastic spine of the bird brush into the slot of the aluminium bracket. Make sure that the bird brush covers the full length of the aluminium bracket right to the ends.



# INSTALLATION

## Roller Door

Step 1: Before installing the bird brush and aluminium bracket make sure to close the roller door fully - doing this reveals the gap between the roller door and the top of the frame at its widest.

Step 2: Fix the bird brush and aluminium bracket onto the top frame of the roller door using the appropriate screw e.g wood screw for wood, self-tapping screw for soft metal or concrete screw for concrete.

Step 3: Make sure that the bird brush is just touching the roller when fixing it on (do not install with the bird brush firmly against the roller door, as this might cause the roller door to become stuck when opening and closing).

Step 4: Test by slowly opening the roller door and observing the brush and roller door (try opening halfway first and closing, then slowly move to fully open).



# INSTALLATION

## Non-Roller Door

**Step 1:** Place bird brush and aluminium bracket on the surface you wish to fix onto.

**Step 2:** Ensure the aluminium bracket is straight and that the bird brush covers the gap you want to cover.

**Step 3:** Fix the bird brush and aluminium bracket by using the correct screw for the install.

**Step 4:** Look over the install and ensure that the bird brush is covering the affected area.

